

WHEELS AND TYRES (Refer EMEI VEH A 291-1)

General information

74.10.00

1. Removing and refitting procedures follow normal practices. Note that when refitting tyres, the two black spots on the inner tube should coincide with the two white spots on the cover adjacent to the beading.
2. As the vehicle is fitted with a transmission hand-brake, it is necessary before removing a road wheel to apply the hand-brake and engage four-wheel drive. This will ensure that the hand-brake is operative on all four wheels.
3. Recommended tyre pressures for all operating conditions, tyre maintenance details and wheel position changing information is detailed in Maintenance, Division 10.
4. Local requirements for tyre tread depth and general cover condition must be observed where applicable.
5. Do not fit tyres with different circumference dimensions between front and rear axles otherwise transmission 'wind-up' will occur after hard pulling in four wheel drive. A 'wind-up' condition is rectified by raising the axle on which is fitted the tyres with the smaller circumference and allowing the transmission to 'unwind'.

